


RoHS


包装图

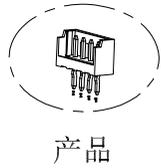

产品




干燥剂

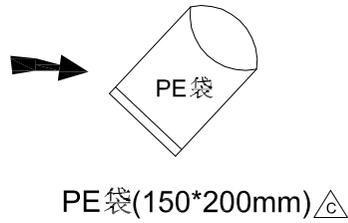


PE袋(150\*200mm)△


步骤一

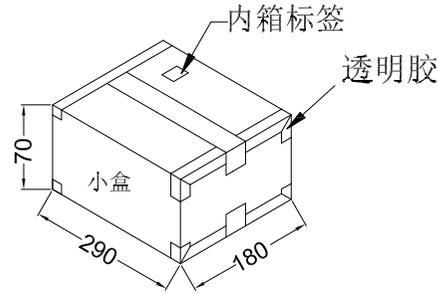

步骤二

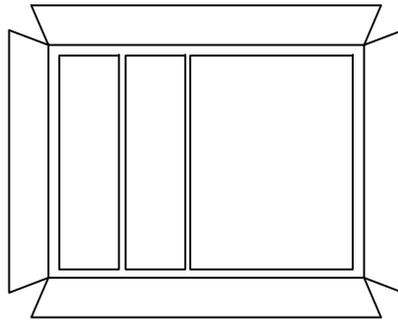

步骤三

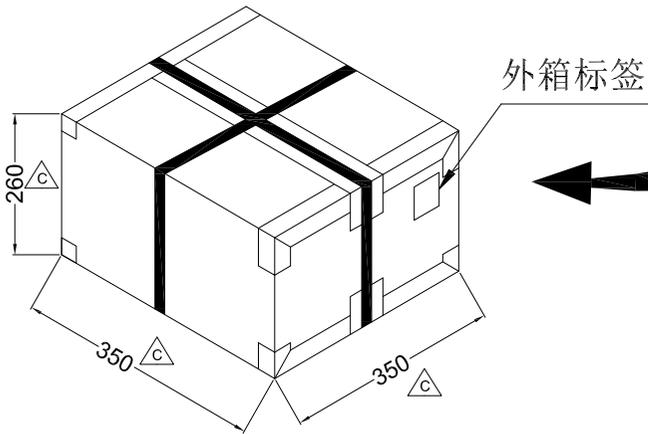

步骤四



包装说明:

- 步骤1: 将检验好的产品依包装数量装入PE袋中,并放入一包干燥剂,并将PE袋封好.贴上标签.
  - 步骤2: 将装好产品且贴好标签的PE袋装入小盒(一小盒装六袋),贴上标签.
  - 步骤3: 将装好产品的内箱套入外箱(一外箱装六小盒)
  - 步骤4: 用透明胶把外箱封好并在外箱上贴上标签,再用包扎带包扎好.
- 注: 1. 尾数可用填充物填  
2. 纸箱有空隙的位置需要填充物填充

Part No.	PIN	PE Bag		Inner Carton		Outer Carton		Total
		PCS/PE	SIZE (MM)	BAG/Inner Carton	SIZE (MM)	Inner Carton/Outer Carton	SIZE (MM)	4 Inner Carton/Outer Carton
2018WV-1x04-46NB03BR001F	04	1000	150x200	△6	290x180x70	6	350x350x260	36000 △

GENERAL TOLERANCE

- .X ±0.35
- .XX ±0.25
- .XXX ±0.15
- X° ±0.2°



东莞市国亚电子有限公司  
Dong Guan Guo Ya Connectors co., Ltd.

PART NO.

2018WV-1x04-46NB03BR001F

TITLE:

2.00mm Wafer Connector

APPROVAL

CHECK

DRAWN

DATE

Yangzhengguo

Yangzhengyi

Lvtiansheng






2016/08/26

UNIT	SCALE	SHEET	REV	NUMBER
MM	1:1	1/1	A0	A-000

DATE	REV	ECN NO.	DESCRIPTION	MODIFY	APPROVAL



视角

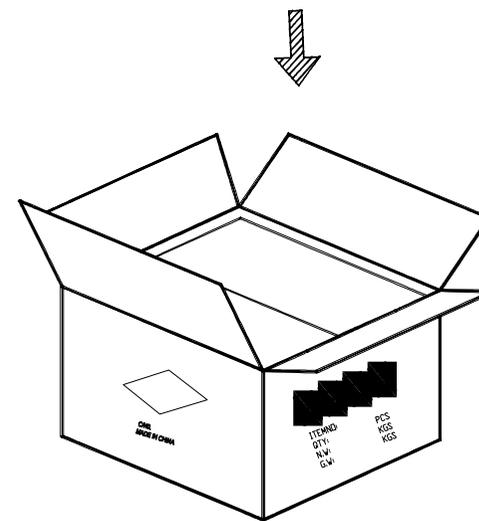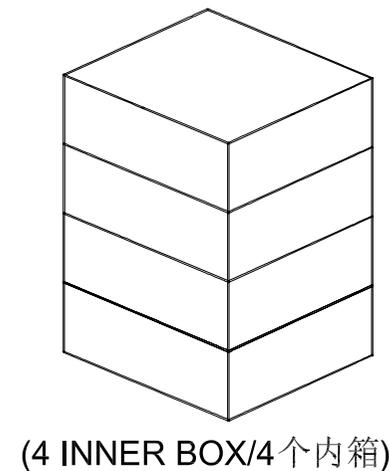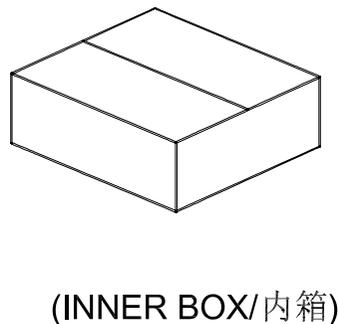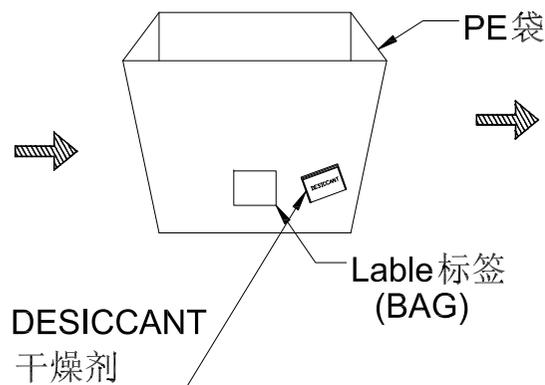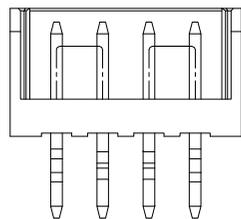

**Note 注解:**

1. 将 Wafer放入PE袋内, ,详细包装见下表
2. 将装好产品的PE袋放入内箱, 详细包装见下表
3. 标签依客户要求而定, 纸箱开口处用透明胶带贴合.
4. 将放满产品的纸箱放入一个大纸箱内, 详细包装见下表

Poles	Pcs/Bag Pcs/包	Pcs/Inner Box Pcs/内箱	Pcs/Carton Pcs/外箱
04	1000	2000	8000

				GENERAL TOLERANCE		东莞市国亚电子有限公司 Dong Guan Guo Ya Connectors co., Ltd.				PART NO. 2018WV-1x04-46NB03BR002F					
				.X ±0.35		APPROVAL		CHECK	DRAWN	DATE	TITLE: 2.00 mm Wafer Package				
				.XX ±0.25		Yangzhengguo		Yangzhengyi	Lvtiansheng	2016/08/26	UNIT	SCALE	SHEET	REV	NUMBER
				.XXX ±0.15		视角					mm	1:1	1/1	A0	A-000
				X° ±0.2°		视									
DATE	REV	ECN NO.	DESCRIPTION	MODIFY	APPROVAL										